


Deleting Folders in the USB External Hard Disk Drive

Files that are copied to the external hard disk drive can be deleted.

CAUTION:

- Deleted files cannot be restored.
- Be sure to back up important files on a PC.

1 Select video or still image mode.

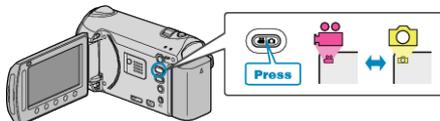

2 Select "DELETE" and touch **OK**.



3 Select the desired folder and touch **OK**.



4 Select "DELETE" and touch **OK**.



- After deleting, touch **OK**.