


Slow-motion (High-speed) Recording


You can increase the recording speed or emphasize the movements using slow-motion recording.

This is a handy function for checking movements, such as golf swings.

1 Select video mode.

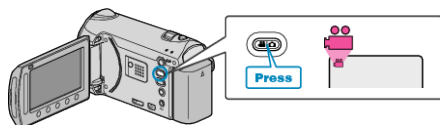

2 Touch **Ⓜ** to display the menu.

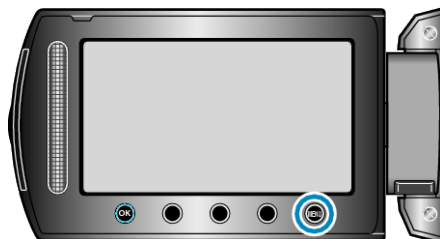


3 Select "HIGH SPEED RECORDING" and touch **Ⓚ**.



4 Select a recording speed and touch **Ⓚ**.



5 Start recording.

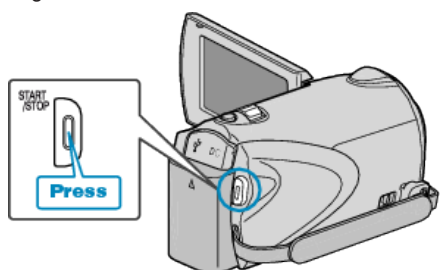

- Recording starts by counting down to the end of the maximum duration. Shooting stops when the timer reaches "0:00:00".
- After recording is complete, it will be saved as a movie.
- Pressing the START/STOP button during countdown of the timer stops the recording process.
- The high-speed setting you have selected will be stored on the camera. To cancel the setting, set "HIGH SPEED RECORDING" to "OFF".

Recording Speed	Maximum Duration	Movie Playback Time
120fps	Up to 4 seconds	2 times of recording duration (up to 8 seconds)
300fps	Up to 4 seconds	5 times of recording duration (up to 20 seconds)
600fps	Up to 2.4 seconds	10 times of recording duration (up to 24 seconds)

Memo:

- "VIDEO QUALITY" is automatically set to "XP".
 - When high-speed recording is enabled, only the optical zoom can be used.
 - Recording is performed at a resolution that is lower than the standard setting, and the video is stored after being converted into the high-definition quality. As such, images may appear grainier than other movies, and a black frame appears around the image.
 - Audio sound is not recorded together with the video.
 - Increasing to a higher recording speed results in grainier and darker images.
- During high-speed recording, it is recommended that a tripod be used, and recording be performed in a bright location with the subject magnified as much as possible.