


Playing Back Files in the USB External Hard Disk Drive

Videos or still images saved in an external hard disk drive can be played back on this camera.


- 1 Select video or still image mode.

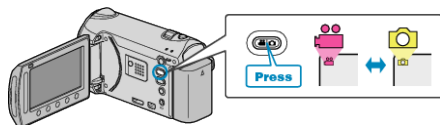

- 2 Select "PLAYBACK" and touch **OK**.



- 3 Select the desired folder and touch **OK**.

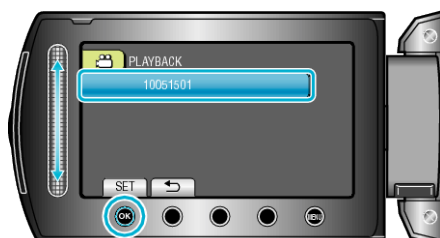

- 4 Select the desired file and touch **OK**.



- Touch **■** to stop playback.

Memo:

- Sound or video may be interrupted during playback.