 



Protecting Selected Files


Protects or releases protection of the selected files.


1 Select the playback mode.

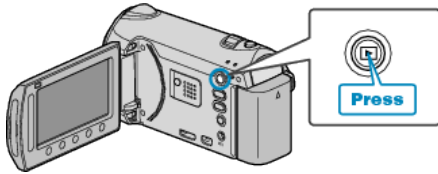

 2 Select video or still image mode.

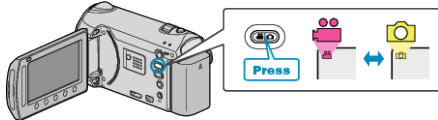

3 Touch  to display the menu.

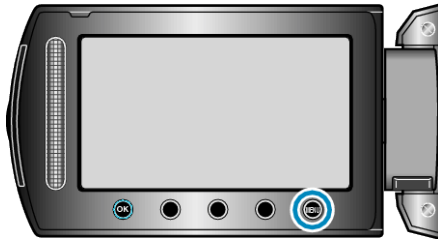 

4 Select "EDIT" and touch .



5 Select "PROTECT/CANCEL" and touch .




6 Select "FILE SELECT" and touch .



7 Select the desired file and touch .



- A protect mark appears on the selected file. To remove the protect mark, touch  again.
- Touch "CHECK" to check the selected file.

8 After selecting all the files to protect or release protection of, touch .

