

FLASH

For setting the flash.


Setting	Details
OFF	Flash does not fire.
AUTO	Flash fires automatically when the surrounding is dark.
AUTO RED-EYE	Fires a pre-flash to reduce red-eye effects.
ON	Fires flash at all times.
SLOW SYNCHRO	Fires flash at all times, and slows down the shutter speed to capture both the subject and background brightly.

Memo:


- The flash icon displayed on the screen blinks while the flash is charging.
- The flash does not fire when “SHUTTER MODE” or “NIGHT EYE”, “NIGHT”, or SNOW in “SCENE SELECT” are set.

Displaying the Item

- 1 Select still image mode.

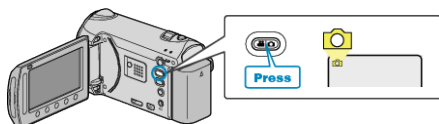

- 2 Touch **MENU** to display the menu.

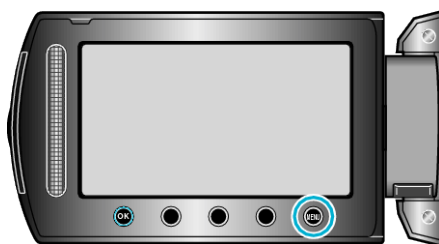

- 3 Select “FLASH” and touch **OK**.

