

## Setting Metering Area

You can set the brightness of a specified area as the standard.


- 1 Touch **MENU** to display the menu.



- 2 Select "MANUAL SETTING" and touch **OK**.



- 3 Select "METERING AREA/TYPE" and touch **OK**.

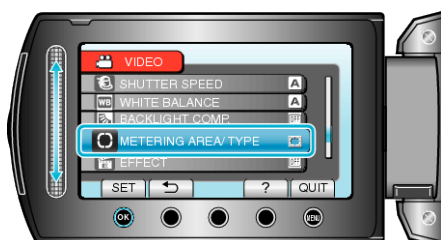

- 4 Select "SPOT" and touch **OK**.



- When "SPOT" is selected, select the position of the spot frame by touching the operation buttons "**←**"/"**→**". After selecting, touch **OK** to confirm.